

## To boot from the office

>telnet scserv 9021

return

➔ cntrl x

➔ [VxWorks Boot]:

Here the proper VxWorks commands must execute... these are

boot device	:ei
processor number	:0
host name	:sc3
file name	:/star/sc/packages/vxWorks/prod/vxWorks/vxw_5.2/config/mv167/vxWorks_jack
inet on ethernet (e)	:130.199.60.218:ffffe00
host inet (h)	130.199.60.27
gateway inet (g)	:
user	:sysuser
flags (f)	:0x10
target name (tn)	:bdb
startup script (s)	:/export/home/users/sysuser/epics/R3.12.2-LBL.4/ioc/bbc/bbc.startup

To edit this you must kill a boot then type c at the [VxWorks Boot] prompt

(follow the screen instructions)

## Files

Currently the bbc.startup is in the "/export/home/users/sysuser/epics/R3.12.2-LBL.4/ioc/bbc" directory and will remain so.

The demand file is called demand.bbc and is in

--- "export/home/users/sysuser/epics/R3.12.2-LBL.4/TRGhvApp/src/bbc "

The medm screens are in

"export/home/users/sysuser/epics/R3.12.2-LBL.4/TRGhvApp/op/adl"

once there medm & brings up the medm menu for you to choose a file.

Choose BBChv\_top.adl

Other relevant files

The source file BBChv.c is in

"export/home/users/sysuser/epics/R3.12.2-LBL.4/TRGhvApp/src

(use the Makefile.Vx to compile)

The data base files for the data base records are in

"export/home/users/sysuser/epics/R3.12.2-LBL.4/TRGhvApp/TRGhvDb"

BBChv\_all.db BBChv\_macro.db BBChv\_macro15.db

(WE MAY PUT THESE IN A NEW SUBDIRECTORY /BBChvDb)

In an analogous fashion we will create FPEhv and FPWhv database files, medm screens src files and startup scripts

BBC -> FPE

bbc -> fpe

and

BBC -> FPW

Bbc -> fpw

William T. Waggoner 12/14/02

